

## PRODUCT NAME

Compotite Corner Shelf

## MANUFACTURER

Compotite  
800-221-1056

## PRODUCT DESCRIPTION

Say hello to Compotite corner shelves—your ultimate solution for sleek and functional shower storage. Crafted with durability and style in mind, these shelves offer a perfect blend of form and function. Their customizable design seamlessly integrates with any of our linear grates and in any shower space, providing convenient storage for essentials. With easy installation and added strength, Compotite corner shelves elevate your shower installations with ease. Say goodbye to clutter and hello to organized elegance. Trust Compotite for top-notch quality and innovation in every detail.

- Stainless Steel marine grade 304
- 2mm thick material for any grout spacing
- Corner shelf 8"x8"
- Self draining shelf
- matching styles with Compotite Linear grate system
- Available in 8 colors



## INSTALLATION

### INSTALLING A SHELF DURING TILE INSTALLATION:

- Determine the desired location of the corner shelf.
- Ensure grout joints are large enough for the metal tabs of the corner shelf 2mm (1/16 in) to fit into. Refer to troubleshooting point #2 if grout joints are too small.
- Dry fit the tabs in the space between the tiles to ensure a proper fit.
- When the tabs fit into the space properly, apply Compotite Elastiseal Pro or other adhesive (e.g. silicone or polyurethane). Then push shelf firmly into place.
- Once the adhesive has dried, grout in the shelf.
- Wait 24 hours and the shelf is ready to use.


### INSTALLING A SHELF AFTER TILE IS INSTALLED AND GROUTED:

- Determine the desired location of the corner shelf.
- Remove the grout between the tiles where shelf will be installed.
- Ensure grout joints are large enough for the metal tabs of the corner shelf 2mm (1/16 in) to fit into. Refer to troubleshooting point #2 if grout joints are too small.
- Dry fit the tabs in the space between the tiles to ensure a proper fit.
- When the tabs fit into the space properly, apply Compotite Elastiseal Pro or other adhesive (e.g. silicone or polyurethane). Then push shelf firmly into place
- Once the adhesive has dried, grout in the shelf.
- Wait 24 hours and the shelf is ready to use.

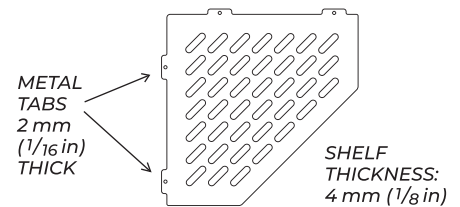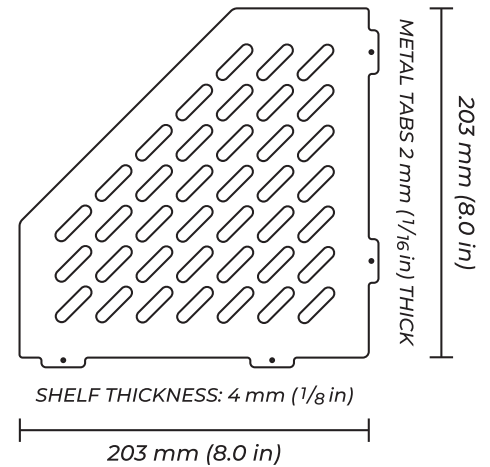

## TROUBLESHOOTING POINTS

1. Best if tile is on a horizontal straight row so the tabs rest evenly on the tile.

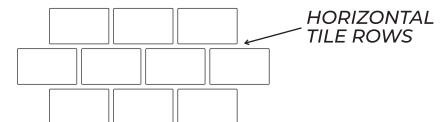

2. If grout joints are smaller than the metal tabs (2 mm / 1/16 in), a diamond grinder wheel can be used to cut the tile to make the joint large enough to fit the tabs. (Always wear safety glasses and be sure not to penetrate the waterproofing behind the tile)

